

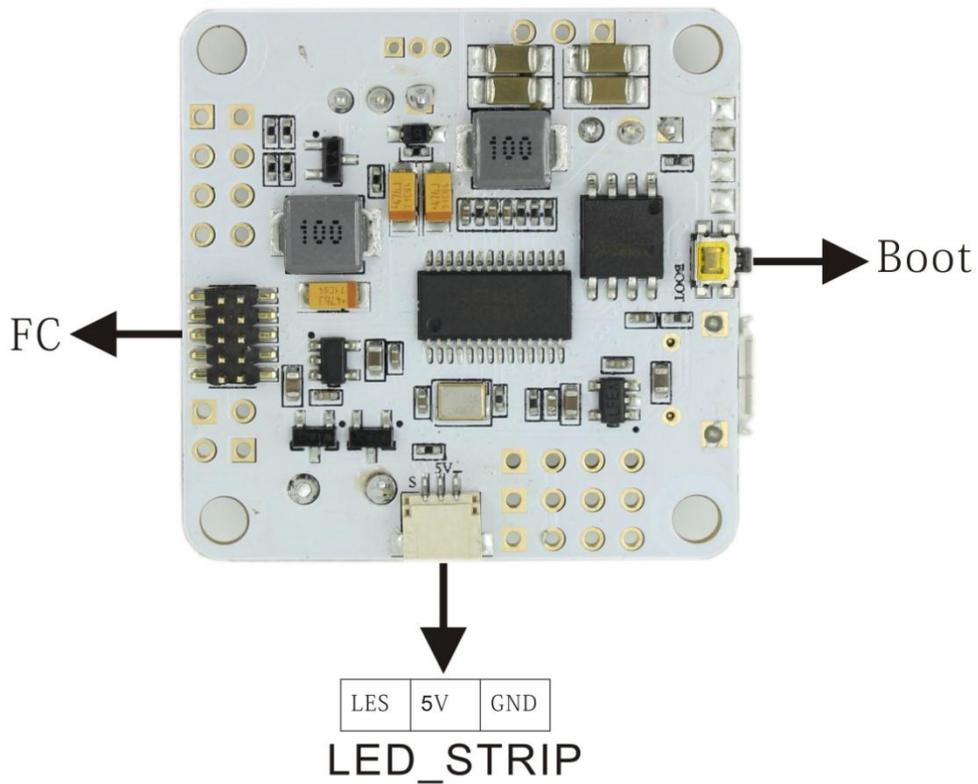



F4 Magnum Manual - V1.0

(OMNIBUSF4 Firmware)

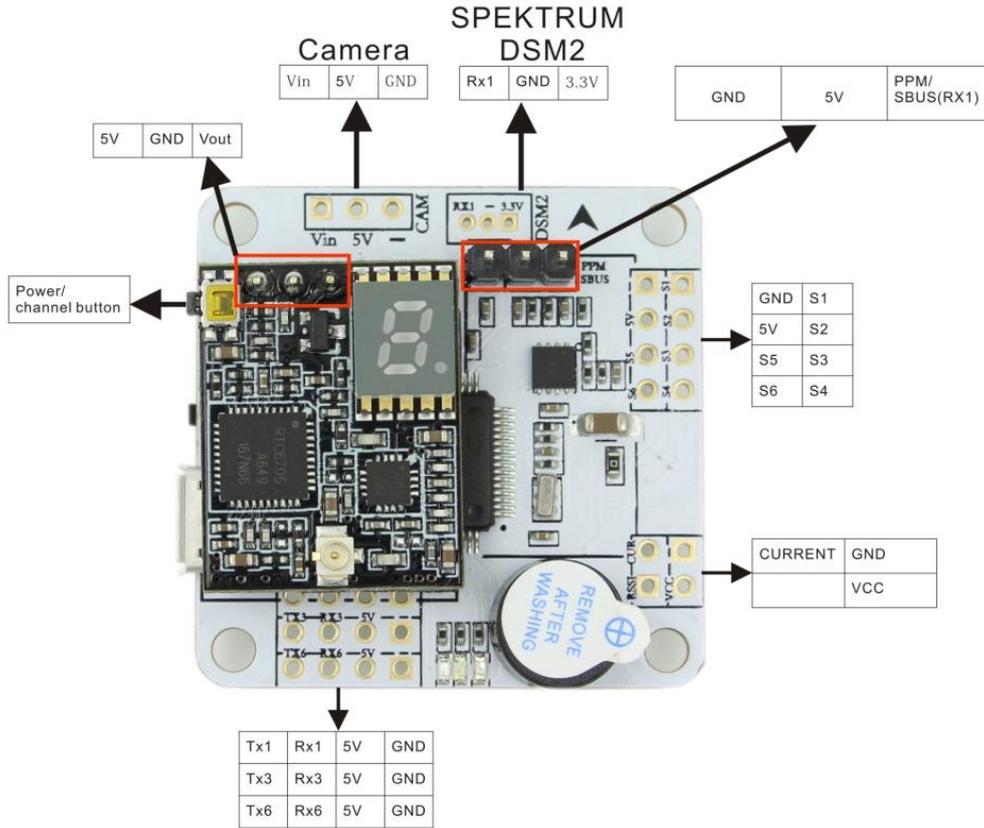

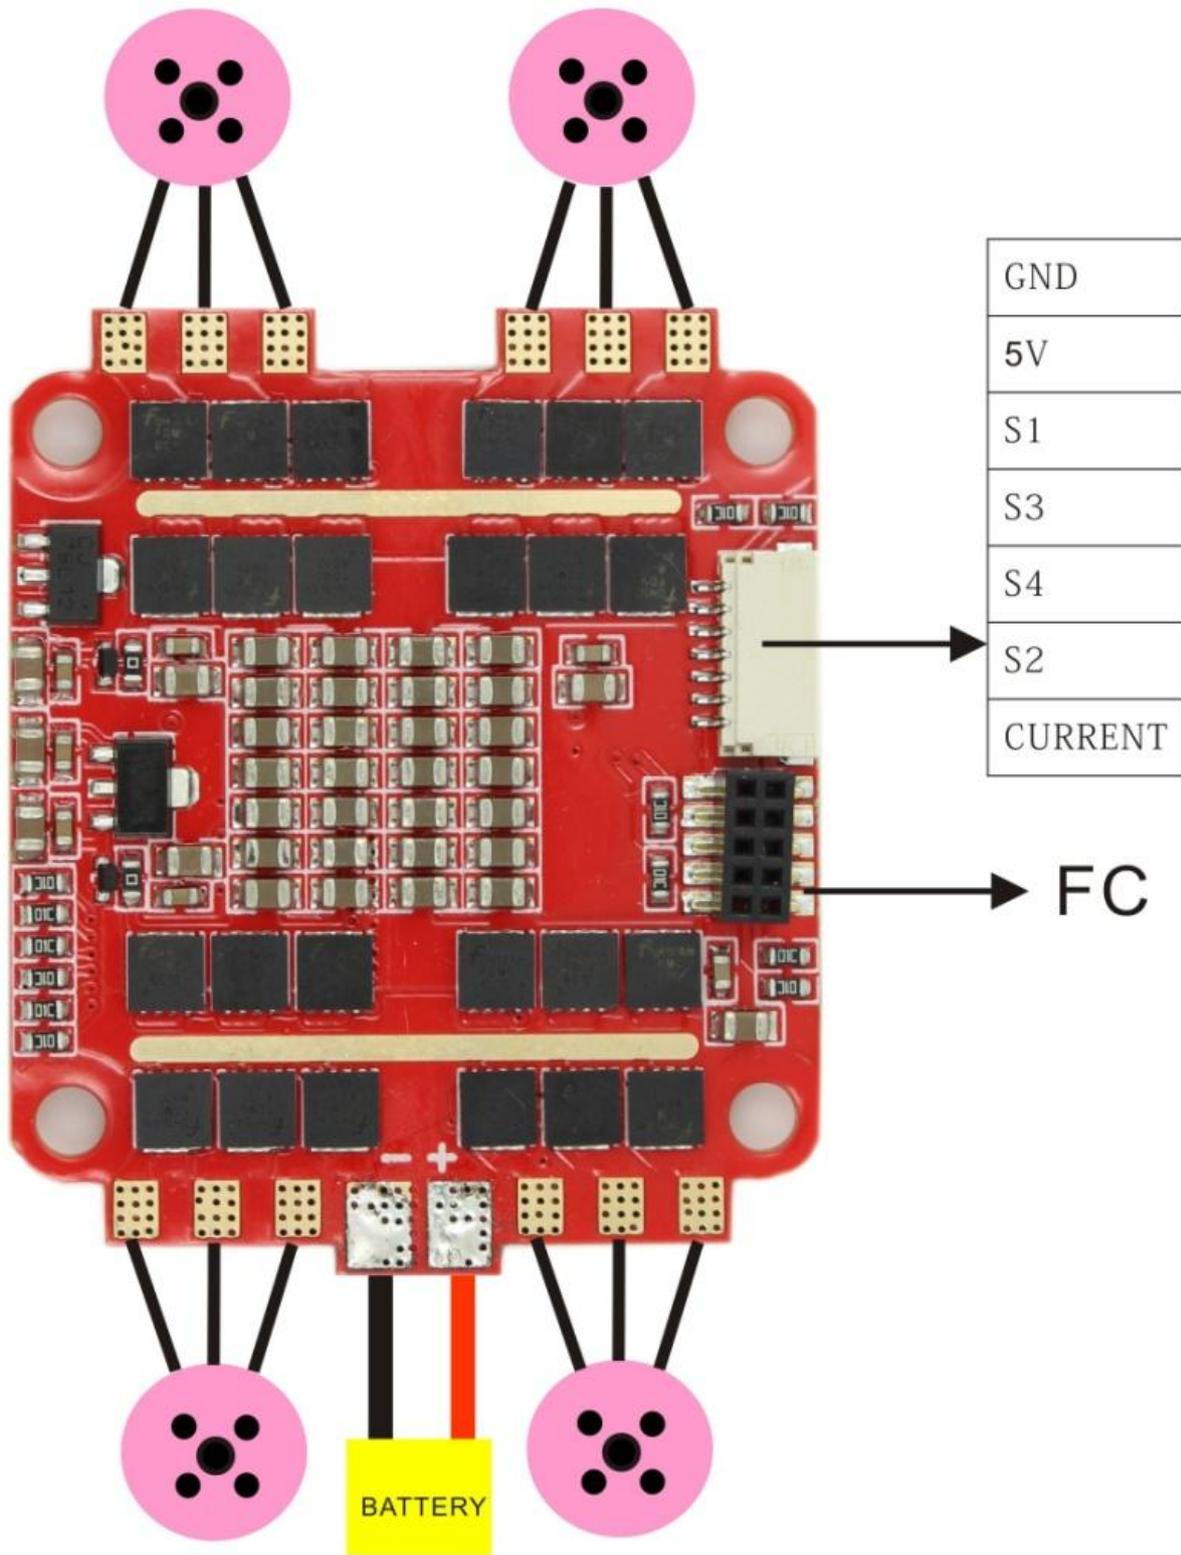

Power / Channel Button

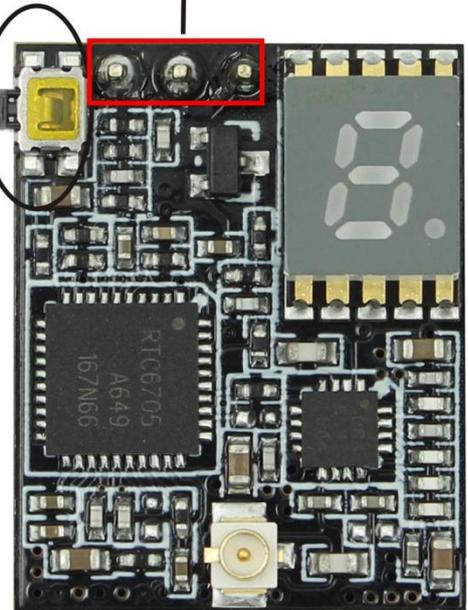

1. Select Power

Long press the button for 10 seconds to switch high / low power at any time. When the selected power is 200mW, the LED dot “.” will be on, when the selected power is 25mW, the LED dot “.” will be off.

2. Select channel / frequency group

1) Select frequency group -- long press the button for 2 seconds to enter frequency group selection, and then short press the button to select a F, R, A, B, E or H frequency group. Long press for 2 seconds to exit frequency group selection.

2) Select channel -- When it is out of frequency group selection, please short press to select the 1-8 channels within the selected frequency group.

3) Frequency group and channels are switched and shown by digital tube, changes by every 2 seconds.

FR \ CH	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8	
F	5740	5760	5780	5800	5820	5840	5860	5880	MHz
R	5658	5695	5732	5769	5806	5843	5880	5917	MHz
A	5865	5845	5825	5805	5785	5765	5745	5725	MHz
B	5733	5752	5771	5790	5809	5828	5847	5866	MHz
E	5705	5685	5665	5645	5885	5905	5925	5845	MHz
H	5362	5399	5436	5473	5510	5547	5584	5621	MHz

Features

Flight controller (OMNIBUSF4 Firmware)

- STM32F405 MCU
- MPU6000 accelerometer/gyro (connected via SPI)
- On-board OSD
- On-board Buzzer
- Integrated 5V/3A BEC
- Integrated LC Filter
- Dedicated PPM/ Sbus receiver input
- On-board high-capacity black box flight log recorder

ESC


- Continuous current 30A
- Supply voltage 2-4S Lipo
- EFM8BB21F16G MCU
- BLHeli-S firmware, support DSHOT, MULTISHOT, ONESHOT125
- Top quality MOSFET
- 3oz high TG PCB board
- On-board current sensor

VTX

- Frequency band: 5362-5945MHz
- Channel: 48
- Transmit power: 13dBm/23dBm
- Supply voltage: 4.5V-5.5V
- Antenna port : 50Ω

Receiver XM+

- Dimension: 21.5*12*2.3mm (LxWxH)
- Weight: 1.6g
- Number of Channels: Up to 16CH from SBUS (CH1~CH15 for PWM, CH16 RSSI for FC)
- Operating Voltage Range: 3.7~10V
- Operating Current: 30mA@5V
- Operating Range: Full range
- With RSSI output on board: Analog 0~3.3V
- Firmware upgradeable
- Compatibility: Frsky D16 mode

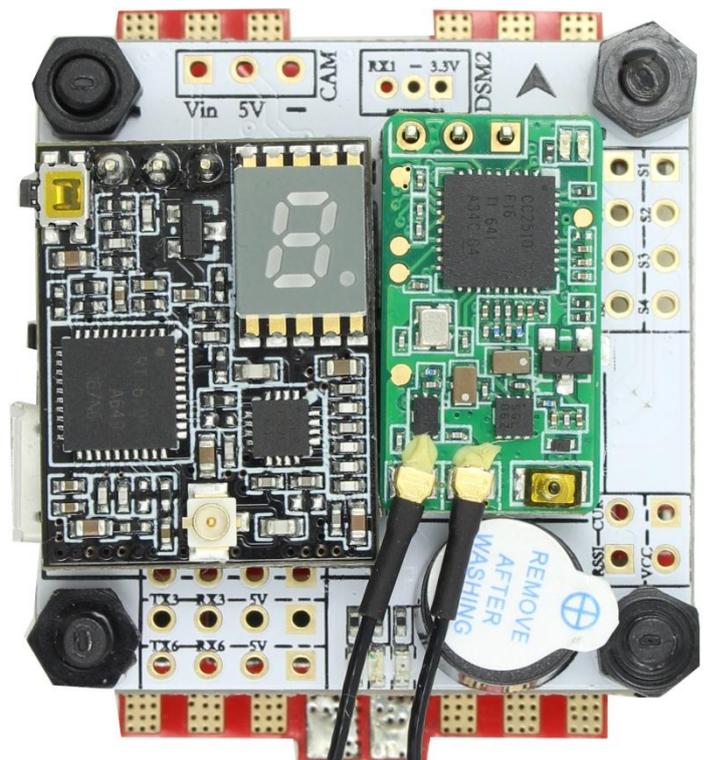



Via Device Firmware Upload (DFU, USB) -windows

Required Software:

- A OMNIBUSF4.hex file (for flashing).
- Zadig USB driver installation -> <http://zadig.akeo.ie/>
- Betaflight Configurator

Flashing steps:

- Place the board into DFU mode by shorting out (soldering or screwdriver) the boot pins on top of the board .Your device will be detected as a STM Device in DFU mode (or STM BOOTLOADER).
- Load up Zadig USB driver and select the STM DFU or STM BOOTLOADER device (if it is not listed please confirm step 1, and / or select "Options / View All Devices" in the Zadig menu. Install the WinUSB driver.

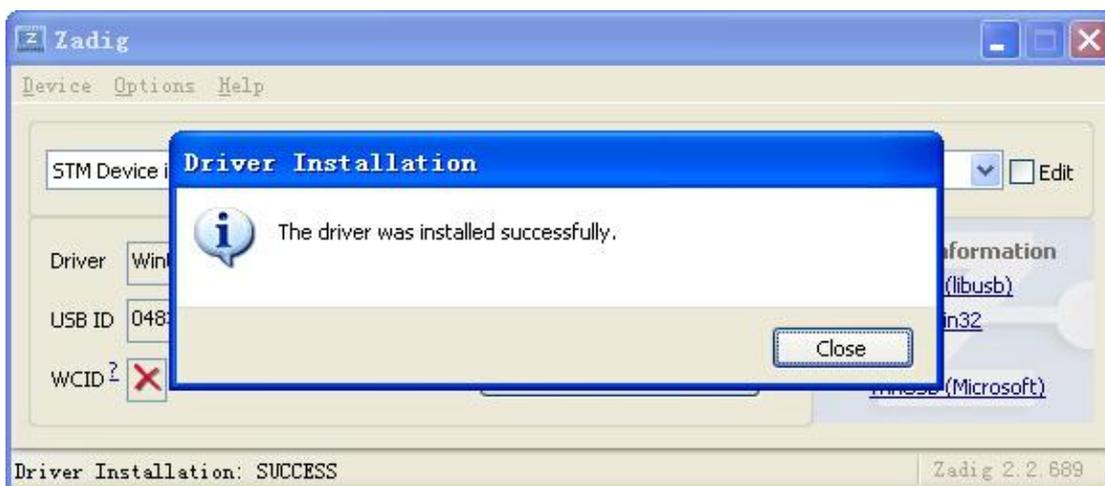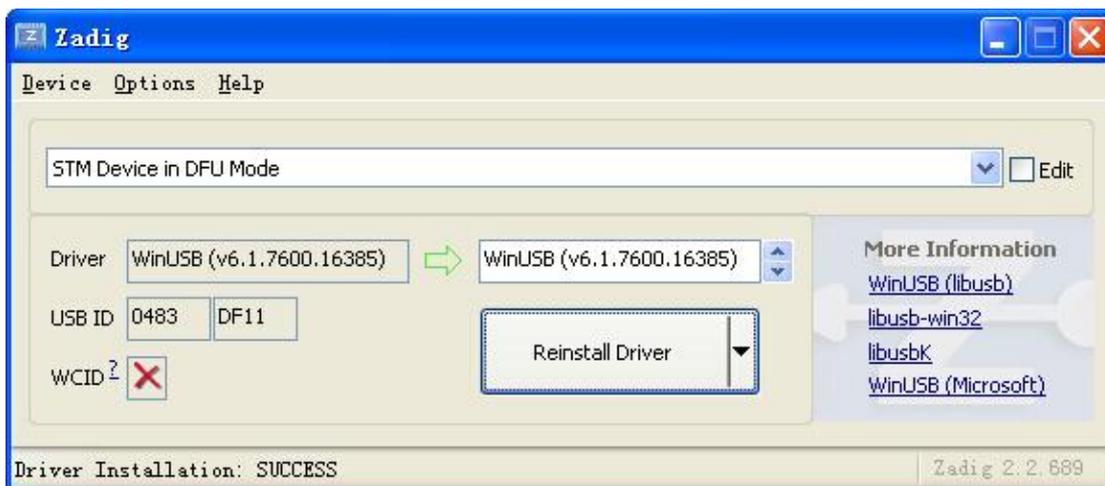

Virtual Communications Port

The F3 Femto utilises the STM32 Virtual Com Port (VCP). This allows the UARTs on board to be utilised whilst the USB is connected. This requires the STM VCP driver to be installed in order for the VCP to be recognised.

The STM32 VCP driver can be downloaded here --> <http://www.st.com/web/en/catalog/tools/PF257938>

NOTE: Once you download and run the installation it has **not** installed the driver, merely unpacked the choice of drivers. Locate the installation directory and then run the EXE file pertaining to your system.

e.g. C:\Program Files (x86)\STMicroelectronics\Software\Virtual comport driver\Win8\ <- will have two files present. One for 64 bit systems and one for 32 bit systems.

- Betaflight Configurator

BETAFLIGHT CONFIGURATOR 3.1.1

2017-05-16 @ 14:03:58 -- Loaded release information from GitHub.

Welcome

Documentation & Support

Firmware Flasher

OMNIBUSF4

3.1.7 - OMNIBUSF4 - 10-04-2017 18:36 (stable)

No reboot sequence

Flash on connect

Full chip erase

Manual baud rate 256000

Show unstable releases

Select your board to see available online firmware releases - Select the correct firmware appropriate for your board.

Select firmware version for your board.

Enable if you powered your FC while the bootloader pins are jumpered or have your FC's BOOT button pressed.

Attempt to flash the board automatically (triggered by newly detected serial port).

Wipes all configuration data currently stored on the board.

Manual selection of baud rate for boards that don't support the default speed or for flashing via bluetooth.

Note: Not used when flashing via USB DFU

Show Release-Candidates and Development Releases.

Warning

Please do **not** try to flash non-Betaflight hardware with this firmware flasher.
Do **not** disconnect the board or turn off your computer while flashing.

Note: STM32 bootloader is stored in ROM, it cannot be bricked.
Note: Auto-Connect is always disabled while you are inside firmware flasher.
Note: Make sure you have a backup; some upgrades/downgrades will wipe your configuration.
Note: If you have problems flashing try disconnecting all cables from your FC first, try rebooting, upgrade chrome, upgrade drivers.
Note: When flashing boards that have directly connected USB sockets (SP Racing 3Mini, Sparky, ColoriRace, etc) ensure you have read the USB Flashing section of the Betaflight manual and have the correct software and drivers installed.

IMPORTANT: Ensure you flash a file appropriate for your target. Flashing a binary for the wrong target can cause bad things to happen.

Recovery / Lost communication

If you have lost communication with your board follow these steps to restore communication:

- Power off
- Enable 'No reboot sequence', enable 'Full chip erase'.
- Jumper the BOOT pins or hold BOOT button.
- Power on (activity LED will NOT flash if done correctly).
- Install all STM32 drivers and Zadig if required (see USB Flashing section of Betaflight manual).
- Close configurator. Close all running chrome instances, Close all Chrome apps, Restart Configurator.
- Release BOOT button if your FC has one.
- Flash with correct firmware (using manual baud rate if specified in your FC's manual).
- Power off.
- Remove BOOT jumper.
- Power on (activity LED should flash).
- Connect normally.

Please load firmware file

Flash Firmware Load Firmware [Online] Load Firmware [Local]

Port utilization: 0.0% U: 0% Packet error: 0 I2C error: 0 Cycle Time: 0

3.1.1